



## Adam I/O unit integration user manual with HikCentral



## Contents

1 System Request.....	3
2 Operation Instruction.....	3
2.1 Add Device .....	3
2.2 Alarm and Event Configuration.....	4
2.3 Map Configuration.....	5
2.4 Alarm search .....	7



## 1 System Request

HikCentral version: HikCentral Professional\_V1.5.0081.20200330

Adam detector : any Adam device

## 2 Operation Instruction

### 2.1 Add Device

1. Log into HikCentral webpage, add the device in the physical view -> Security Control Device

The screenshot shows the 'Security Control Device' section of the HikCentral interface. On the left is a sidebar with icons for Encoding Device, Access Control Device, Elevator Control Device, Security Control Device (which is selected and highlighted in red), Dock Station, Recording Server, Streaming Server, DeepinMind Server, Security Audit Server, and Smart Wall. The main content area has a header with 'Add', 'Delete', 'Change Password', 'Time Zone', and 'Refresh' buttons. Below this is a search bar and a table header with columns for Device Name, Address, Device Serial No., Version, Alarm Input, Alarm Output, Radars, Network Status, Password Strength, and Operation. A message 'No data.' is displayed below the table. At the bottom, there are navigation buttons for 'Total 0 Record(s)' and a Go button.

2. Choose the Access protocol as ADAM Protocol and fill in device information.

The screenshot shows the 'Add Security Control Device' configuration page. The left sidebar is identical to the previous screenshot. The main area has tabs for 'Basic Information', 'Time Zone', and 'Channel Information'. The 'Basic Information' tab is active, showing fields for Access Protocol (set to ADAM Protocol), Adding Mode (set to IP Address), Device Address (10.199.13.100), Device Port (502), Device Name (ADAM\_10.199.13.100), Input Number (12), Output Number (8), and Input Alarm (set to OFF). Below these are dropdowns for Time Zone and Time Zone of Device, and a checkbox for 'Apply to Device'. The 'Time Zone' tab shows a dropdown for selecting a time zone. The 'Channel Information' tab shows a button for 'Add Channel to Area' and checkboxes for 'Channel' (selected) and 'All Channels'.

3. After adding the device, all the Adam alarm can be checked in the logical view

**HikCentral Professional Web Client**

Area      Group

HikCentral Professional

Area Name

HikCentral Professional

ADAM\_10.199.13.100

NVR\_10.199.13.33

Cameras    Doors    Elevators    Radars    **Alarm Inputs**    Alarm Outputs    UVSSs

+ Add    Delete    Move to other Area    Include Sub-area    Search    Q

	Name	Device	Belong to Area	Added to Map
<input type="checkbox"/>	Zone-1_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
<input type="checkbox"/>	Zone-2_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
<input type="checkbox"/>	Zone-3_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
<input checked="" type="checkbox"/>	Zone-4_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
<input type="checkbox"/>	Zone-5_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
<input type="checkbox"/>	Zone-6_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
<input type="checkbox"/>	Zone-7_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
<input type="checkbox"/>	Zone-8_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
<input type="checkbox"/>	Zone-9_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
<input type="checkbox"/>	Zone-10_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
<input type="checkbox"/>	Zone-11_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
<input type="checkbox"/>	Zone-12_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No

## 2.2 Alarm and Event Configuration

- Log into HikCentral webpage->alarm/ Event and add the event/alarm as follows

**HikCentral Professional Web Client**

System-Monitored Event    Generic Event    User-Defined Event    **Alarm**

**Add Alarm**

Alarm Definition

Triggered by:  Source Type:  Triggering Event:  **Alarm Input**

Source:  Alarm Input/Security Control Partition/Area

- ADAM\_10.199.13.100
- Zone-1\_ADAM\_10.199.13.100
- Zone-2\_ADAM\_10.199.13.100
- Zone-3\_ADAM\_10.199.13.100
- Zone-4\_ADAM\_10.199.13.100
- Zone-5\_ADAM\_10.199.13.100
- Zone-6\_ADAM\_10.199.13.100
- Zone-7\_ADAM\_10.199.13.100
- Zone-8\_ADAM\_10.199.13.100
- Zone-9\_ADAM\_10.199.13.100
- Zone-10\_ADAM\_10.199.13.100
- Zone-11\_ADAM\_10.199.13.100
- Zone-12\_ADAM\_10.199.13.100

Description: Enter the instructions for handling the alarm or enter remarks for the alarm.

Alarm Properties



HikCentral Professional Web Client

System-Monitored Event

Generic Event

User-Defined Event

Alarm

Add System-Monitored Event

Basic Information

Triggered by: Camera, Door, Elevator, Radar, Alarm Input, ANPR, Person, UVSS, Remote Site, Encoding Device, Access Control Device

Triggering Event: Search, Alarm Input

Source: Alarm Input/Security Control Partition/Area

Actions

Add, Add and Trigger Alarm, Cancel

## 2.3 Map Configuration

1. Log into HikCentral webpage-> logical view, find the alarm input and click relate map

HikCentral Professional

Area Name: ADAM\_10.199.13.100

Cameras, Doors, Elevators, Radars, Alarm Inputs, Alarm Outputs, UVSSs


+ Add, Delete, Move to other Area, Include Sub-area, Search

Name	Device	Belong to Area	Added to Map
Zone-1_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
Zone-2_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
Zone-3_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
Zone-4_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
Zone-5_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
Zone-6_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
Zone-7_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
Zone-8_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
Zone-9_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
Zone-10_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
Zone-11_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No
Zone-12_ADAM_10.199.13.100	ADAM_10.199.13.100	ADAM_10.199.13.100	No

Set GIS, Refresh Map



2. Upload map and map scale as following picture

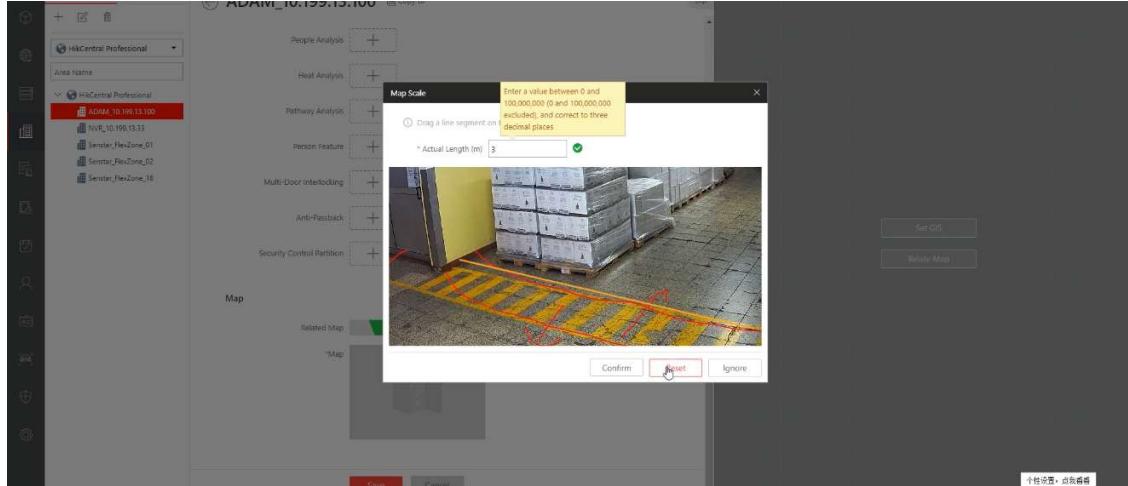

3. Select the Alarm input and drag it in to map to add the alarm icon.

## 2.4 Alarm search

1. Go to the Hikvision Control client -> Alarm/Event Search, the alarm can be find when searching alarm input.

The screenshot shows the HikCentral Professional Control Client interface. The left sidebar navigation includes Video Search, Search Video on Device, VCA Search, Person Search, Face Search, Archive Search, Identity Verification, Alarm/Event Search (selected), Event Search, Vehicle Search, Vehicle Search, Identity Access Search, Identity Access Search, Entry & Exit Counting, and a Filter section. The main content area has two tabs: 'Alarm Search' and 'Alarm Search-Investigation'. The 'Alarm Search' tab is active, showing a table of alarms. The table columns are: Mark, Name, Priority, Alarm Time (..), Source, Area, Triggering Ev..., Status, and Categ. The table lists multiple entries for 'Zone\_2\_ADM...'. The 'Alarm Search-Investigation' tab is also visible, showing a detailed view of a specific alarm entry for 'Zone\_2\_ADM...'. This detailed view includes a video feed showing a warehouse floor with pallets, a map view, and alarm details: Alarm Time (Control Client): 2020/02/03 17:46:11, Alarm Time (Device): 2020/02/03 17:46:11, Alarm Source: Zone\_2\_ADM...10.199.13.100, Triggering Event: Alarm Input, and an 'Acknowledge' button at the bottom.